


Product Details

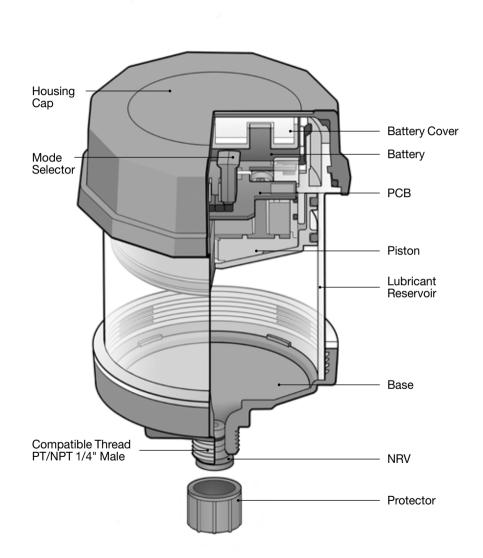


Installation & Disposal Guidelines

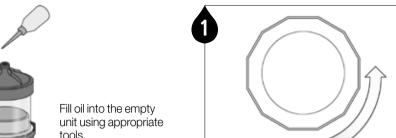

Turn the housing cap counterclockwise to unscrew the cap.

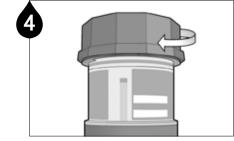

Put the cap back on and turn it clockwise until the cap is securely locked in place.

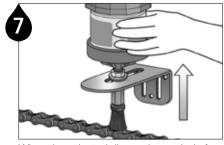

When the selected dispensing period of the Pulsarlube EO has completed, remove the lubricator from the application.



Remove the batteries.




When installing the unit at a 45° angle or greater, use an adapter with 1/4" or bigger thread if the total weight of the

Installation Precautions


must be under 5bar.

Avoid high backpressure. The backpressure at the tip of lubricator

Max 5

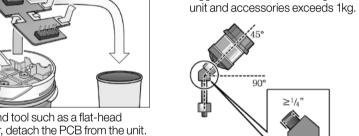

For remote installation using a Ø4

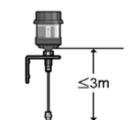

at 3m (10ft) or less.

tube, keep the maximum distance


Once the unit is filled. insert the Non Return Valve (NRV) before

Direct Mount, Remote Installation installation.

Brush kit Installaion

For a complete list of available accessories, refer to Accessories for


Oil Lubrication on the back of this user manual.

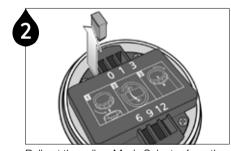

Pull out the yellow Mode Selector from the default OFF position.

Firmly push the Mode Selector into the slot

of the desired dispensing period.

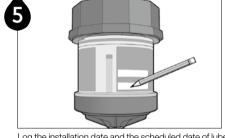

Log the installation date and the scheduled date of lube cycle completion on the label of the Pulsarlube EO. Note Please note there is a delay before the unit starts dispensing oil. It can take up to 3 weeks for enough gas to generate to start dispensing



Install the unit on the lube point using appropriate

6

Note Do not excessively tighten the Pulsarlube EO as it may result in damage to the tip of lubricator.



The Pulsarlube EO is an eco-friendly product that can be recycled. Turn the housing cap counterclockwise to disassemble the product for proper disposal.




Unscrew to remove the battery cover.




Warning Do not cut, puncture, or reuse lubricator.



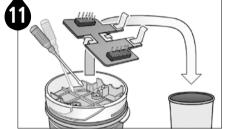

Using a hand tool such as a flat-head screwdriver, detach the PCB from the unit.

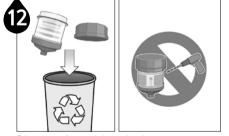

Dispose of remaining plastic components complying with local regulations for recycling.

Product Certifications

Certifications

Ex ia IIC T4 Ga IECEx KTL 12,0008X -20°C≤Ta≤+55°C

((₀₃₄₄

II 1 G Ex ia IIC T4 Ga INERIS 12ATEX0062X -20°C≤Ta≤+55°C

EN 60079-0:2012/A11:2013 EN 60079-11:2012

IEC 60079-0:2011

IP68

IEC 60079-11:2011

Ex ia IIC T4 Ex ia IIC T4
12-KB2BO-0283X
-20°<Ta<+55° -20℃≤Ta≤+55℃



CI. I, Div. 1, Gps. A, B, C, D Cl. II.Div. 1. Gps. E. F.G Hazardous locations, intrinsically safe, Exia, Temp. Code T4, -25° C \leq Ta \leq $+55^{\circ}$ C



TESTED FOR INTRINSIC SAFETY IN METHANE

Warning

- ▶ Locations : Intrinsically Safe, SÉCURITÉ INTRINSÈQUE, Exia
- Potential electrostatic charging hazard; clean only with a damp cloth
- Do not change, replace, or charge battery cells
- Temp Code T4: -25°C ≤ TA ≤ +55°C
- ➤ Substitution of components may impair Intrisic Safety : AVERTISSEMENT
- LA SUBSTITUTION DE COMPOSANTS PEUT COMPROMETTRE LA SÉCURITÉ INTRINSÈQUE
- If ignitable gasses are present, touch only with an insulating object or while wearing an electrostatic grounding device
- The batteries are not user-replaceable



Warning

For oils below ISO VG 100, place the oiler below the lube point and curl the lube line a couple of times to avoid oil leaks caused by gravity.

Accessories for Oil Lubrication (Sold Separately)

Single Point Remote Installation Kit (Kit No. 2000RO-1)



Oil Brush & Bracket Kits (Kit No. C038~41)



Use OEM Pulsarlube oil kits to ensure proper lubrication To download installation manuals, please visit our website at www.pulsarlube.com Products → Installation Kits → Oil Lubrication

Shelf life and Product Warranty Warranty is limited to original defects in material and workmanship and will not cover any collateral damage due to mishandling, abuse and /or any

other inappropriate use of this product. Warranty period is 1 year from the date of purchase.

PUL/ARLUBE


The World Leader of Automatic Lubrication



(60ml/120ml/240ml)

Pulsarlube USA. Inc.

1170 Ardmore Ave Itasca IL 60143, USA TEL:1-847-593-5300 FAX:1-847-593-5303 www.pulsarlube.com/info@pulsarlube.com

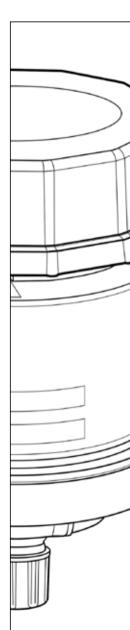

Rev.01

