


Product Details

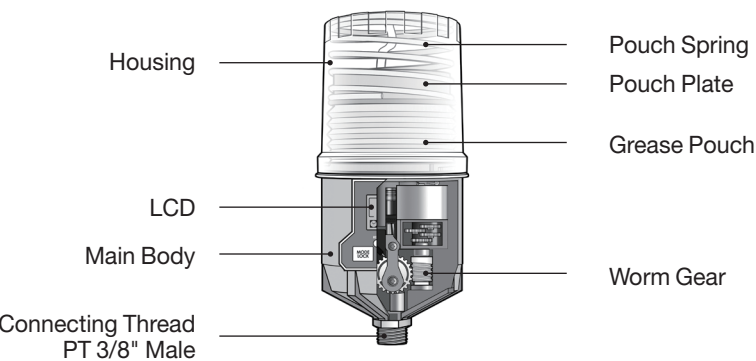

Pulsarlube Link System



LINK SYSTEM

The LINK system is a remote monitoring platform that operates through a Pulsarlube Gateway.

*Please consult with your sales representative before use.

www.pulsarlube-link.com



Online User Manual

Please refer to the online manual for more details.

LK-BT(r)




LINK



Installation Guideline


* All parts should be assembled tightly with PTFE tape.

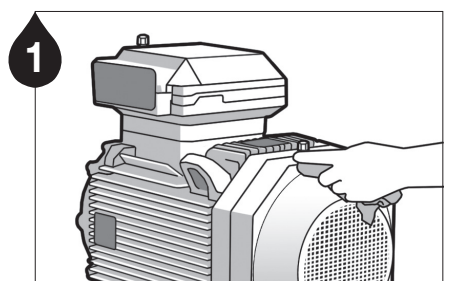


Remove contaminants around the lube point.




Check the grease pouch capacity and the service pack items (battery pack, grease pouch & dust cover).

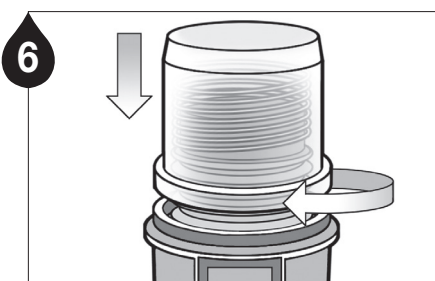


Refit the top housing on the unit and turn clockwise until it clicks.

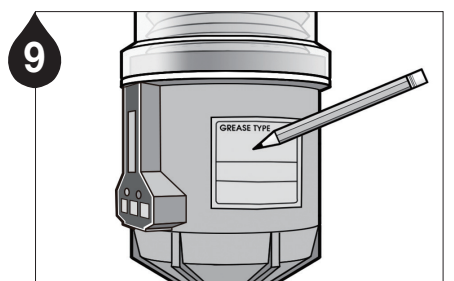


Note the installation date and the scheduled completion date of lube cycle on the lubricator using the label provided in the Service Pack for maintenance purposes.

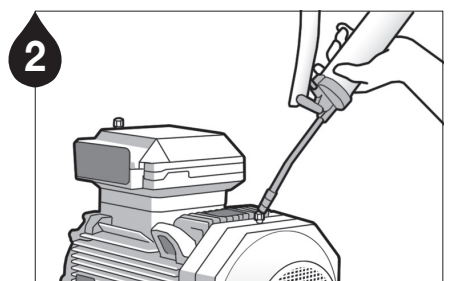


Ensure a clear passage using a manual grease gun. **Note1** Remove any hardened grease by purging the lube point with a manual grease gun. **Note2** The grease in the equipment and the grease contained in the unit should be the same or compatible.

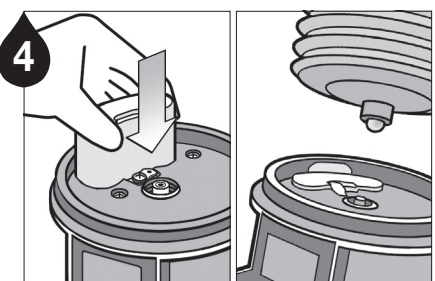


Insert battery pack and purge the grease pouch until grease comes out of the tip. *Use a lithium battery when using the 500ml unit.

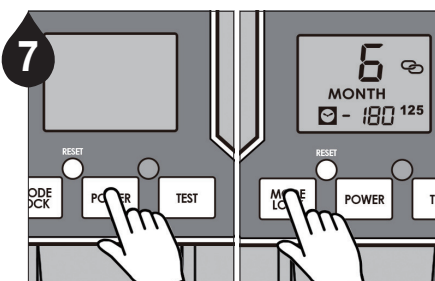


Press **POWER** button for 2 seconds to power on. Press **MODE** button to select dispensing period.

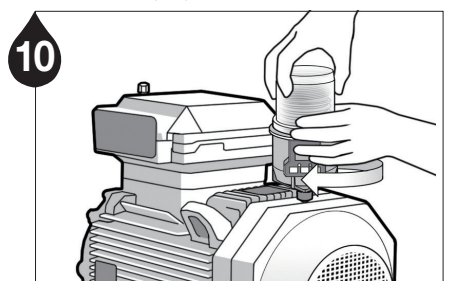


Install the Pulsarlube M unit on the lube point. When the selected dispensing period has completed, replace the Service Pack following steps 3~6.

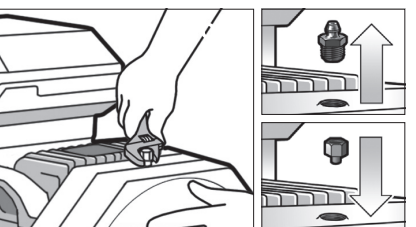


Remove the grease nipple and install appropriate adaptors.

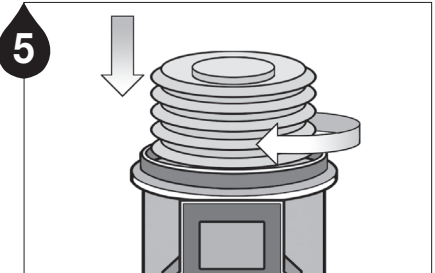

Carefully screw the grease pouch in by turning clockwise. Do not over tighten.

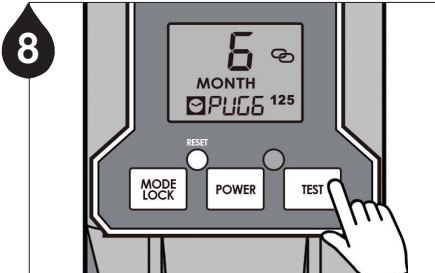

Press the **TEST** button for 2 seconds to run a test cycle and check for proper operation of the unit.

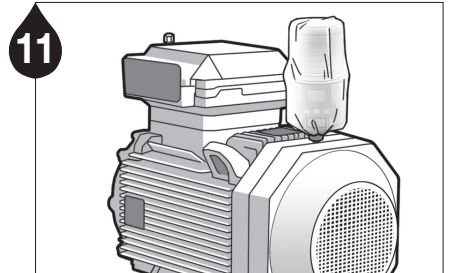

Install the dust cover over the lubricator for added protection.


Troubleshooting Guideline

5r00 (Sensor)

Error : Operation on hold due to non-detection of motor sensor

Possible Cause : Problem with the motor sensor

Solution : Contact your supplier

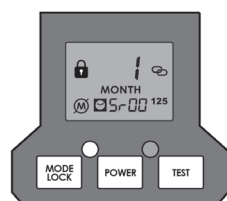


bP00 (BPSM) *Back Pressure Sensing Mode

Error : Excessive backpressure indication

Possible Cause : Hardened grease obstructing lube point or kinked lube line

Solution : Purge grease into the lube point using a clean manual grease gun to eliminate possible hardened grease that may be causing an obstruction. This will alleviate excessive backpressure. Reduce lube line length if possible.

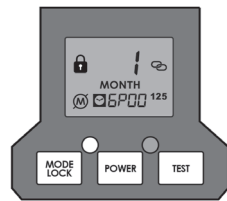


Ch00 (Check)

Error : Motor not responding

Possible Cause : Electric motor may not be able to activate due to possible electrical problem


Solution : Contact your supplier

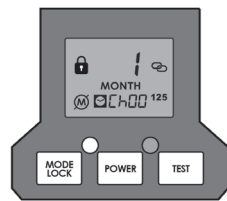

Error : Blank LCD screen

Possible Cause : CPU electrical malfunction or battery problem

Solution : Replace battery pack / Press reset button to restart the lubricator / Contact your supplier if problem persists

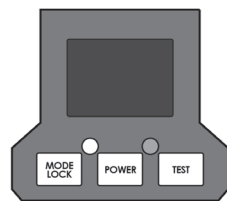

Button Operation

Dispensing Period
60,125,250ml : 1~12 month
500ml : 6 month

MODE LOCK
Automatic Lock Out Mode
Press for 2 seconds to unlock (🔒)

POWER
Power **ON/OFF**
Press for 2 seconds to power unit on or off

TEST
Purge Mode
ON : Press for 2 seconds
OFF : Short press of button
(will stop after completion of ongoing cycle)

RESET
Reset to default setting when the unit malfunctions and/or after changing the Service Pack

LCD Display

88
MONTH
Dispensing period setting

☑ - 180
Remaining dispensing days

🔒
Automatic Lock Out mode


60/125
250/500
Grease pouch capacity

🔋
Low battery power

Ⓜ
Operation of the lubricator has been interrupted (refer to Troubleshooting Guideline)

💧
Dispensing period has completed

📶
Bluetooth Status

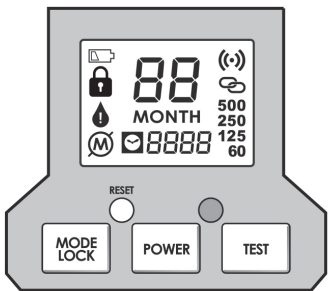

MODE LOCK + **TEST**
Backlight **ON/OFF**
Hold the Mode button and then press the Test button

☑ ch00
Number of days operation has been on hold due to motor error

☑ 5r00
Number of days operation has been on hold due to motor sensor error

☑ bP00
Number of days operation has been on hold due to backpressure

☑ PUG6
Number of remaining purge cycles

☑ 5t03
Number of days since dispensing period has completed
(🔋 and 📶 will also display)

Red LED
LED blinks when battery is low, excessive backpressure exists, or dispensing period has completed

Green LED
LED blinks during normal operation


📶
Remote Control Active

Certification



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Mounting Methods

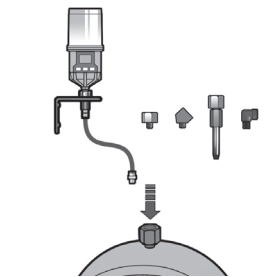


Single Point Installation

Direct Mount or Remote Installation using Lube Line

Direct mount is always preferable. For applications not allowing a direct installation, remotely mount the unit using appropriate accessories and keep the distance from the lube point as short as possible.

For remote installation using a tube, use a Ø6 (1/4") tube pre-filled with the same or compatible grease as the grease contained in the unit.

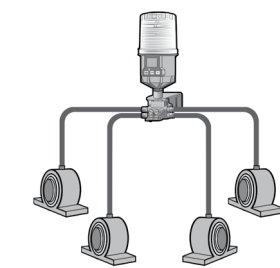

Multi-Point Installation

Multi-Point Remote Installation using Progressive Divider Block (2~8 Points)

Remote multi-point lubrication is available with the lubricator using a divider block. It is recommended to test the back pressure of the bearing, lube lines, and divider block after assembly using a grease gun connected to a pressure gauge. Ensure the break-off pressure is below the average operating pressure of 30bar (435psi).

Warning

- ▶ For remote installation, keep the maximum distance at 6m (20ft) or less.
- ▶ Do not plug any open ports on the divider block. The kit or divider block must be ordered with the appropriate number of points required. For more information on the divider block, please refer to the Multi-Point Remote Installation Manual.
- ▶ Use the lithium battery pack for specific applications such as : extremely cold temperatures, any multi-point or long distance single point (greater than 10ft.) for 500ml unit.

Shelf life and Product Warranty Warranty is limited to original defects in material and workmanship and will not cover any collateral damage due to mishandling, abuse and /or any other inappropriate use of this product. Warranty period is 1 year from the date of purchase.

Rev.00

ISO9001/14001



Pulsarlube USA, Inc.

1170 Ardmore Ave Itasca IL 60143, USA
TEL:1-847-593-5300 FAX:1-847-593-5303 www.pulsarlube.com / info@pulsarlube.com



PULSARLUBE

User Manual

Pulsarlube
LK-BT(r)
Series
(60ml/125ml/250ml/500ml)