


## DETAILED PARTS AND ASSEMBLY PROCEDURE

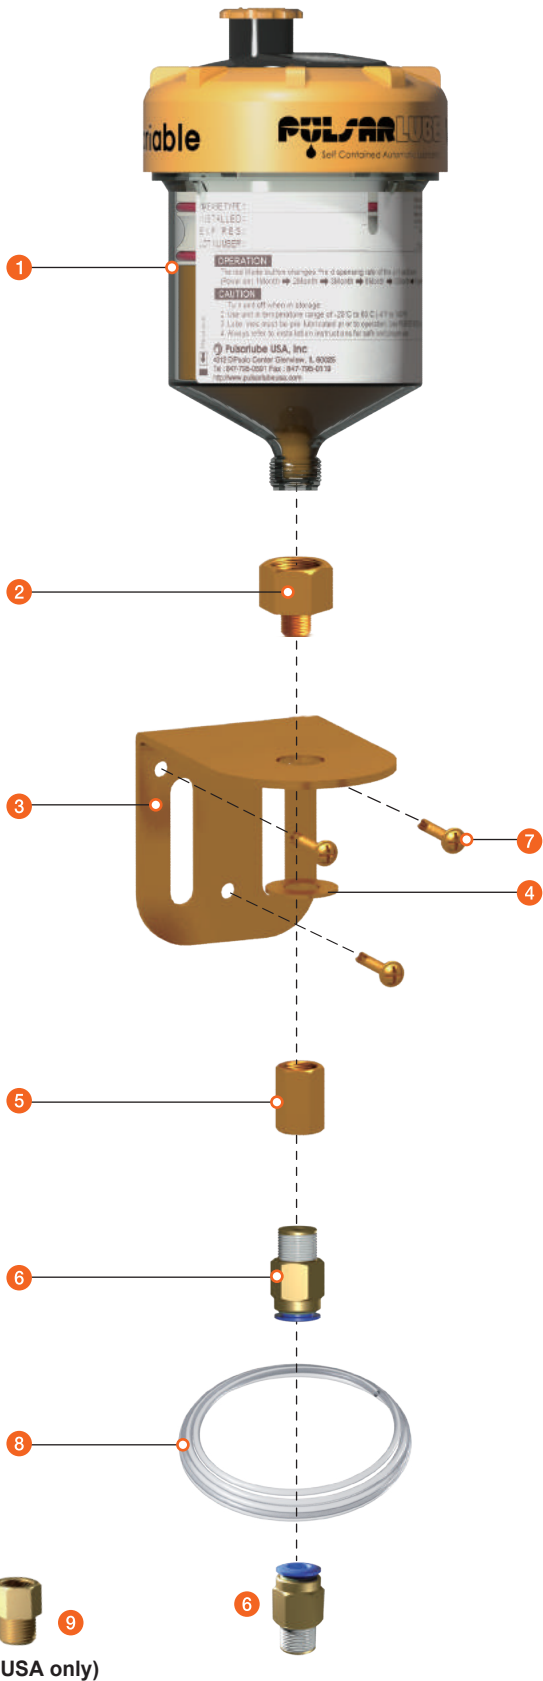

LIST	PART No.	DESCRIPTION	Q'TY
1	V Unit	Pulsarlube V	N/A
2	A002	Reducer, 3/8" F X 1/8" M Adaptor	1
3	B002	Mounting Bracket, "L" Shape	1
4	B057	Washer	1
5	A012	Socket, 1/8" F x 1/8" F Adaptor	1
6	A239	Tube Fitting, Push-In Type, PC8-PT1/8" M	2
7	B051	Self Drilling Screw, #8 x 20	3
8	A212-1	Distribution Tubing, O.D. 5/16" (8mm) Urethan Tubing, 3ft (1m)	1
9	A243	Thread Converter, PT1/8" F X NPT1/8" M (USA only)	1

### ASSEMBLY PROCEDURE

1. Install the mounting bracket ( 3 ) at a proper location using screws ( 7 ). It is good practice to mount the lubricator in close proximity to the bearing to keep feed lines as short as possible.
2. Install the lubricator ( 1 ) using the provided reducer ( 2 ), washer ( 4 ), and socket ( 5 ) on the mounting bracket ( 3 ). Be sure to position the lubricator so that it will allow for easy adjustments.
3. Insert the push-in fitting connector ( 6 ).
4. Measure and cut the tube ( 8 ) to the desired length. Be sure the tube ends are cut clean and perpendicular and that no damage is present on the outside surface.
5. Insert the tube into the push-in fitting connector ( 6 ) for a quick and easy leak-proof connection.
6. Install lubricator and follow lubricator operation instructions on user manual.

### COMMENTS

1. All Parts should be assembled tightly with PTFE tape.
2. For optimal performance with remote installation kits, using an NLGI #1 grade grease is recommended.
3. If the bearing lube point is NPT, use the thread converter ( 9 ).

Note : All parts above are Metric thread.